

Laser Sight with Rail Mount Kit Instruction Manual

Installation:

1. Remove switch from laser sight. Remove the two outer screws on the MT-61166 Rail Mount and loosen the middle screw until the laser sight able to slide into the mount. Choose a easily identifiable mark on the laser sight and line it up with the line on the mount. This will allow you to remove and reinstall the laser sight without having to sight in again.
2. Tighten the middle screw to secure laser sight. Insert the three LR44 batteries with the positive side outwards and screw on the switch of your choice. Use the wide rubber band to secure the pressure pad switch to the gun where it will be easily accessible.
3. Mount the laser sight onto your rail by clamping the mount onto the rail and tightening the two outer screws.




Operation:

1. Pressure pad switch: Press to turn on / Release to turn off
2. Slide switch: Slide to either side to turn on / Slide to middle to turn off

Alignment:

1. Turn the four alignment screws located around the head of the laser sight for horizontal and vertical alignment. Be sure to loosen one side before tightening the other. We recommend using the AimSHOT Bore Sight with appropriate arbor for the easiest way to aim your laser sight. Visit [www.aimshot.com](#) for more information.

Avoid Exposure Laser Radiation
Emitted From This Aperture

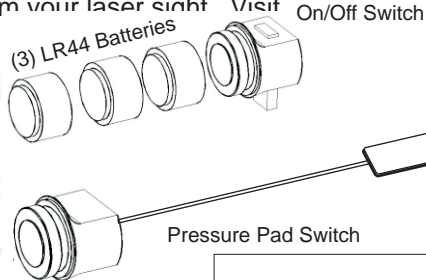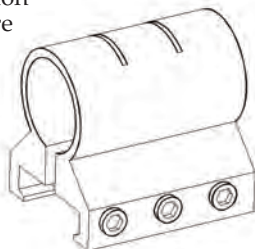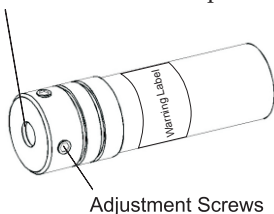

6 69256 06132 8