


NOTE: THE PRODUCT SHOWN IN THIS MANUAL MAY BE DIFFERENT FROM YOUR UNIT, BUT CAN BE ADJUSTED USING THE SAME PROCEDURE.

1




TURN UNIT OVER, PUT QUICK RELEASE LEVER IN OPEN POSITION, AND LOOSEN FLATHEAD SCREW LOCATED UNDER QUICK RELEASE LEVER.

2

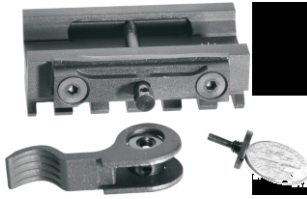


REMOVE FLATHEAD SCREW AND PULL QUICK RELEASE LEVER STRAIGHT OUT, AWAY FROM UNIT.

3

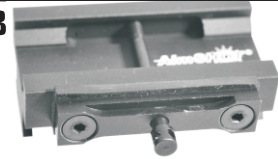

ROTATE THE REMAINING SCREW CLOCKWISE TO TIGHTEN THE MOUNT, OR COUNTER-CLOCKWISE TO LOOSEN. ADJUST IN 1/4 TURN INCREMENTS.

4

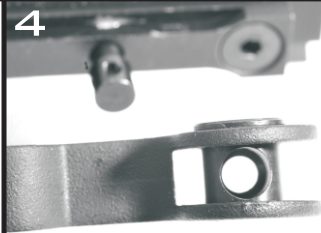

WHEN DONE ADJUSTING, INSTALL THE QUICK RELEASE LEVER BACK ONTO THE SCREW MAKING SURE THE BIGGER HOLE IN THE NUT IS FACING THE SCREW.

5

REINSTALL FLATHEAD SCREW AND TEST FIT UNIT. IDEALLY YOU WILL FEEL PRESSURE/RESISTANCE AT 45 DEGREES FROM CLOSED. REPEAT AS NECESSARY TO FIT YOUR RAIL.